

Euro-Locks SA NV (Belgium)

E: sales@euro-locks.be

T: +32 61 212.261

Euro-Locks SA (France)

E: euro-locks@euro-locks.fr

T: +33 (0)3.87.92.61.11

**Euro-Locks Sicherheitseinrichtungen
GmbH (Germany)**

E: vertrieb@euro-locks.de

T: +49 (0) 6897 9072 0

Euro-Locks Sp. z o. o. (Poland)

E: sekretariat@euro-locks.pl

T: +48 (32) 344-78-70, -82, -84



USER INSTRUCTIONS

3700

Gemini Digital

For full fitting, operating and
programming instructions please visit
www.euro-locks.com

Public Mode

Turn Handle to Locked Position

Lock

ENTER USER CODE
(4 DIGITS)



CONFIRM CODE
(4 DIGITS)



TRY TURNING
HANDLE
ENSURE LOCKED

Unlock

USER OR
MASTER CODE



TURN HANDLE
TO OPEN

Private Mode

Unlock

USER OR
MASTER CODE



TURN HANDLE
TO OPEN



LOCK
Automatic after 4
seconds

Change User Code

#



OLD USER CODE



02



NEW USER CODE





NEW USER CODE



Emergency Key Override

INSERT MASTER KEY OVERRIDE & TURN 90°
EITHER CLOCKWISE OR ANTI-CLOCKWISE

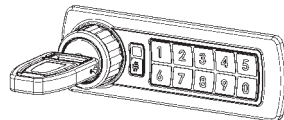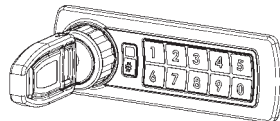

TURN KEY BACK 90° TO ORIGINAL
POSITION & REMOVE FROM LOCK

Error



Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds.

Always wait for LED lights to finish before pressing next key.